

KAYE BALL HOLDERS, MODELS BH16 & BH33

(effective 10/14/02)

These are the user instructions for the Kaye Ball Holders. All persons who set-up, adjust, or use the items should first read these entire instructions. Please store these instructions for future reference.

USE

The ball holders offer out-of-the-way storage for inflatable balls or rolls.

SIZE AND WEIGHT LIMITS

The BH16 holds inflatables that measure from about 14 to 24 inches or from about 36 to 61 centimeters in diameter.

The BH33 holds inflatables that measure from about 25 to 49 inches or from about 64 to 124 centimeters in diameter.

Neither unit should be used to support and object other than inflatables and should not support more that 15 pounds or 7 kilograms.

INSTALLATION

Refer to the diagram and install the unit as follows:

1. If the unit shipped with the legs or L-shaped tubes removed, install those legs into the U-shaped tube so that the snap button in each leg aligns with the holes in the U-tube.
2. If the unit shipped with the legs installed, rotate each of the legs upward so that the snap button in each leg aligns with the holes in the U-tube (The legs may need to be moved in or out slightly for the push-pins to catch.).
3. Ensure that the legs are adjusted to the same position. If not, depress the push-pin on one of the legs and slide it in or out.
4. Determine where the holder will be installed and mark the location of the four attachment

holes as described below. The holes should be drilled into the hollow portion of the wall.

5. Distance A should be at least 18 inches (46 cms.) from the ceiling for the BH16, and at least 38 ins. (97 cms.) from the ceiling for the BH33.

6. Distance B should be at least 6 ins. (16 cms.) from the ceiling for the BH16, and at least 13 ins. (34 cms.) from the ceiling for the BH33.

7. The vertical distance between the holes should be 4.5 ins. (11.5 cms.) for BH16, and 10 ins. (25.5 cms.) for the BH33.

8. The horizontal distance between the holes should be 13 ins. (33 cms.) for the BH16 and 23 ins. (58.5 cms.) for the BH33.

9. Ensure that the above holes will be drilled into the hollow portion of the wall, not into studs, and drill the four holes with a 7/16" dia. bit.

10. Gently tap the wall anchors into the holes.

11. Tighten each of the screws completely to secure the anchors in place.

12. Remove all four screws.

13. Place a washer on each screw and secure the holder to the wall. Do this so that the legs point upwards.

14. To adjust the depth of the holder, depress the push-pins and move the unit in or out until the pins snap into another set of holes.

MAINTENANCE AND CARE

Inspect the unit regularly. Tighten the hardware as necessary. If the unit needs service or spare parts, contact Kaye Products, Inc. or the distributor from whom you purchased the unit. If a problem is discovered that may impact the unit's function, immediately cease use and contact Kaye Products, Inc.

Use water and, if needed, soap to clean the unit.

Avoid any undue stress to the unit while using, storing, or transporting it.

LIMITED WARRANTY

If an item proves defective within two years of the original purchase, we will provide you with replacement parts in order to correct that defect. Wear and tear is not covered by the warranty.

Kaye Products, Inc. makes no other warranty, expressed or implied, and does not warrant the product as being fit for a particular purpose. The purchaser, owner, and user assume all risk of personal and property injury due to the use of the equipment.

CAUTIONS

1. Do not use with broken or missing parts.
2. Do not exceed the size and weight limits.
3. Do not alter the unit or use it in any way other than described herein.
4. Do not use the unit to support anything other than inflatables.

QUESTIONS?

If you have any questions, comments, or requests, please contact Kaye Products, Inc.

